EasyCam Pro™

Instruction Manual

For technical support, contact Jasco Products Company at 1-800-654-8483 or www.jascoproducts.com

98669

User's Manual

USB PC Camera

Table of Contents

1 How To Install and Use The PC Camera 3

1.1 Use Installer to install camera driver..... 3

1.2 How to Use Your PC Camera..... 3

1.3 Special Effects and Face Tracking..... 4

1.4 Anti-Flicker Setting..... 7

2 Getting Started With MediaImpression 9

3 Getting Started with MSN® Messenger 14

4 Minimum System Requirements..... 14

5. Two Year Limited Warranty ……15

6. FCC Statement ……15

1 How To Install and Use The PC Camera

There are two ways to install Camera Driver:

1.1 Use Installer to install camera driver

Don’t connect the camera to your computer yet!

1.1.1 Install Driver

Insert the CD into your CD-ROM drive; the installer screen will automatically come up. Click the "Install Device Driver" button to start installing.

Note #1: If the installer screen does not come up automatically, click Start,then Run and execute the file “launch.exe” on the CD to start theinstaller program.

1.2 How to Use Your PC Camera

1.2.1 Plug Webcam’s cable to the USB port on your computer.

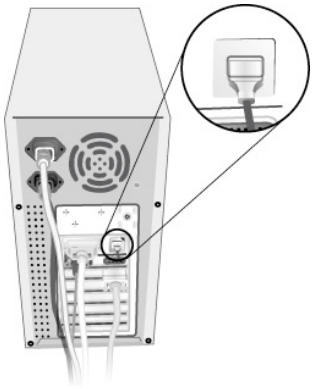

1.2.2 Start MediaImpression

(1)Select “WebCam”.

(2)Select “Make Movie”

1.3 Special Effects and Face Tracking

1.3.1 Activate your Webcam and open the Property page.

1.3.2 Open the Property page (take ArcSoft MediaImpression as an example):

(1) Close any active video browsing software
(2) Open ArcSoft MediaImpression
(3) Select“WebCam”and the following figure appears:

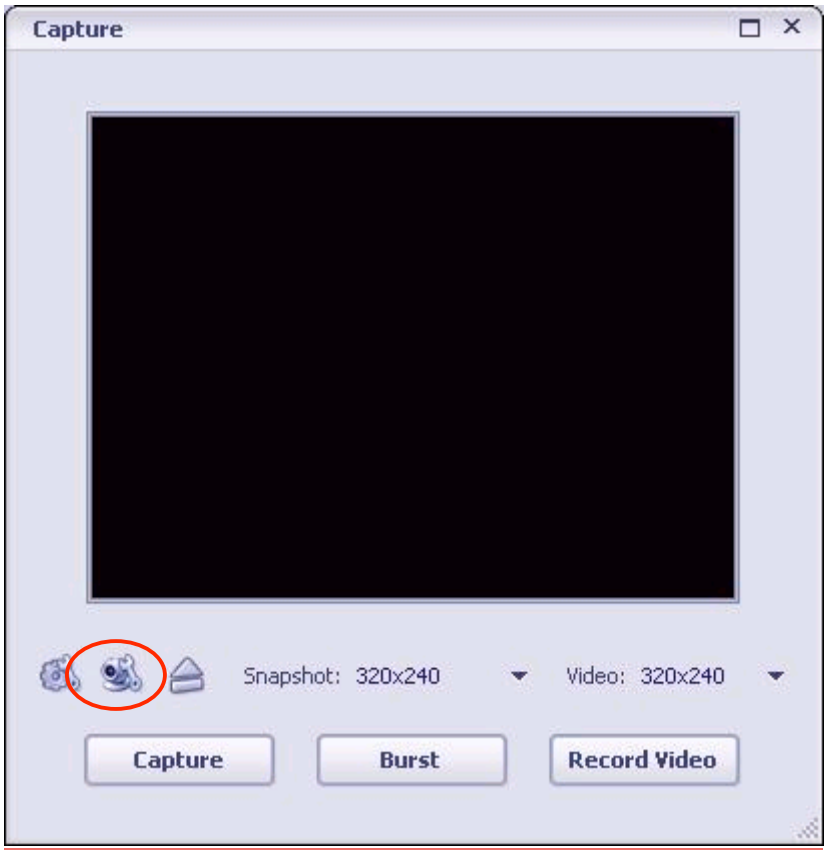

(4) Click “WebCam” Settings” to open the Property page for adjustment.

1.3.3 Select the “Effects_Frame” page to add special effects.

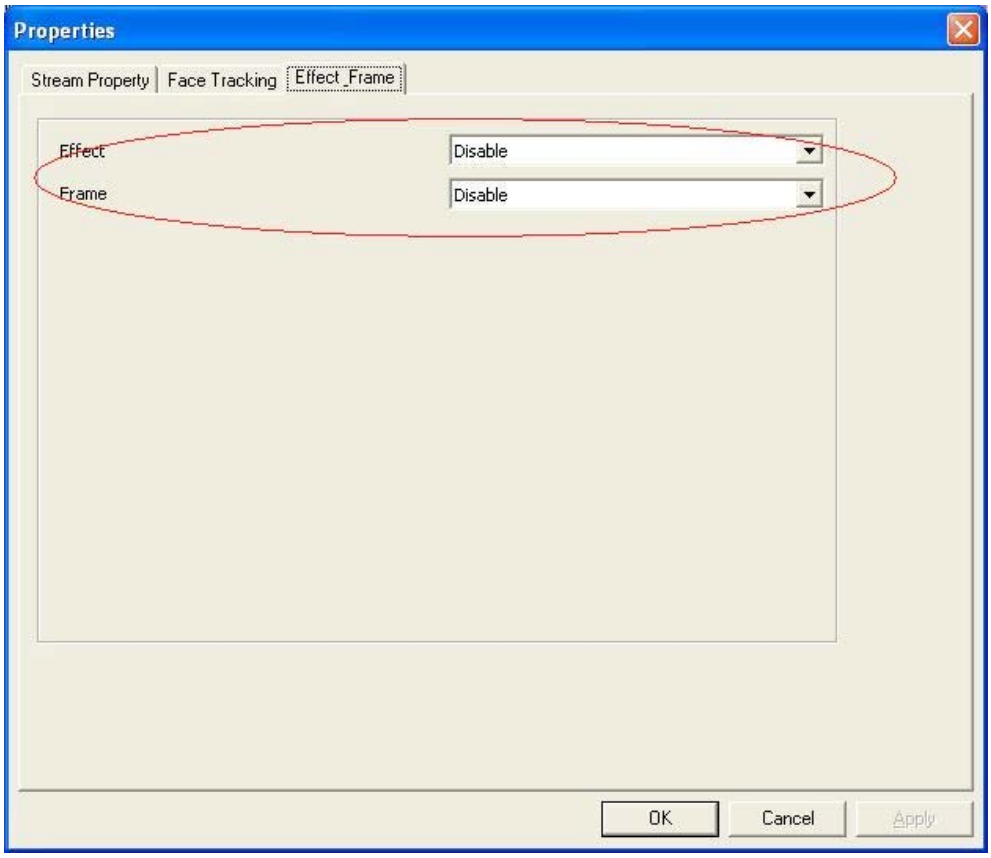

1.3.4 Select the “Face Tracking” page to enable face tracking.

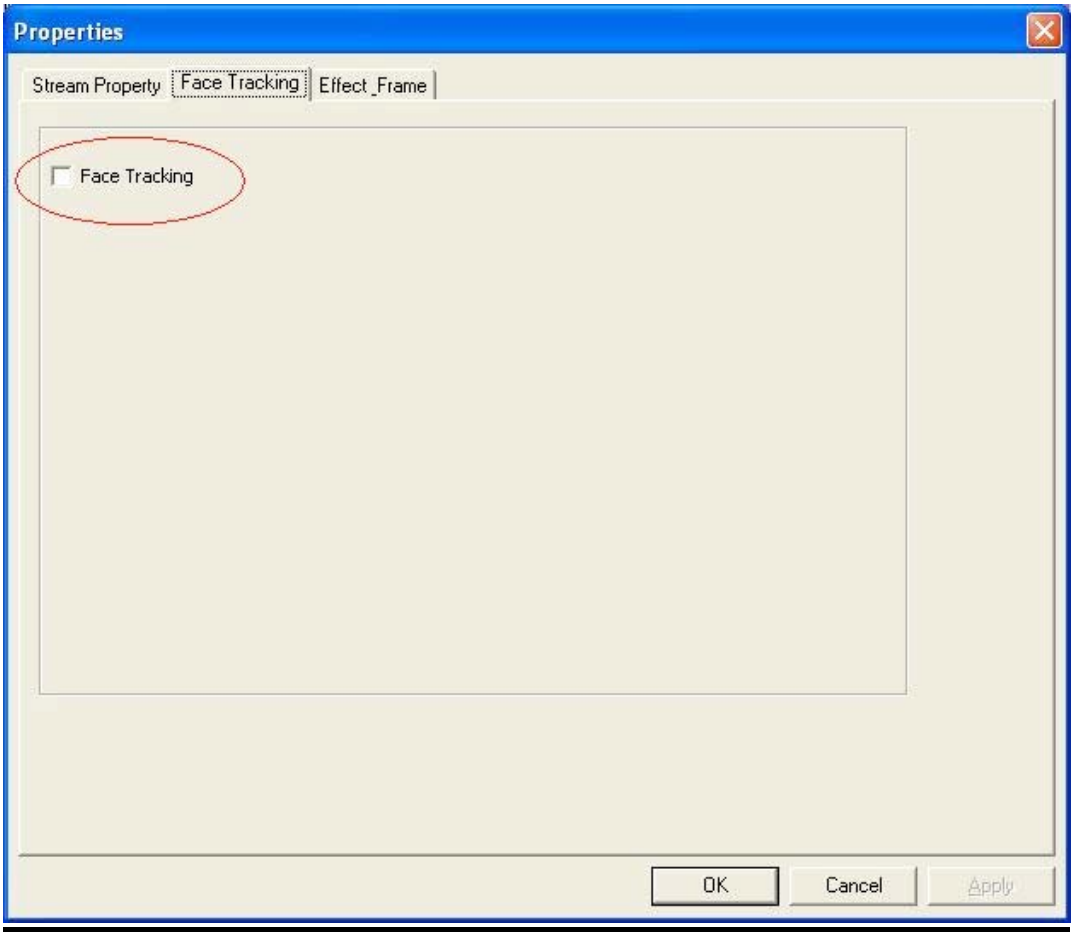

1.4 **Anti-Flicker Setting**

When the flickers, the rolling horizontal (vertical) bands, appear on the screen, change the power frequency setting.

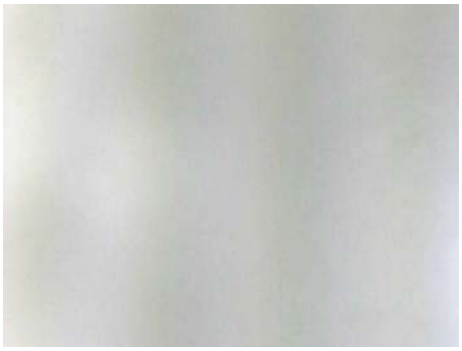

Note:

Set 50Hz or 60Hz according to your region.

50Hz : Europe, Australia, Africa, Asia, China and Japan(East).

60Hz: America, Taiwan, Korea and Japan(West).

Anti-Flicker setting:

1.4.1 Open the Property page (refer to installation guide 1.3.3)

1.4.2 After opening Stream Property, select 50Hz or 60Hz in the “Flicker” option.

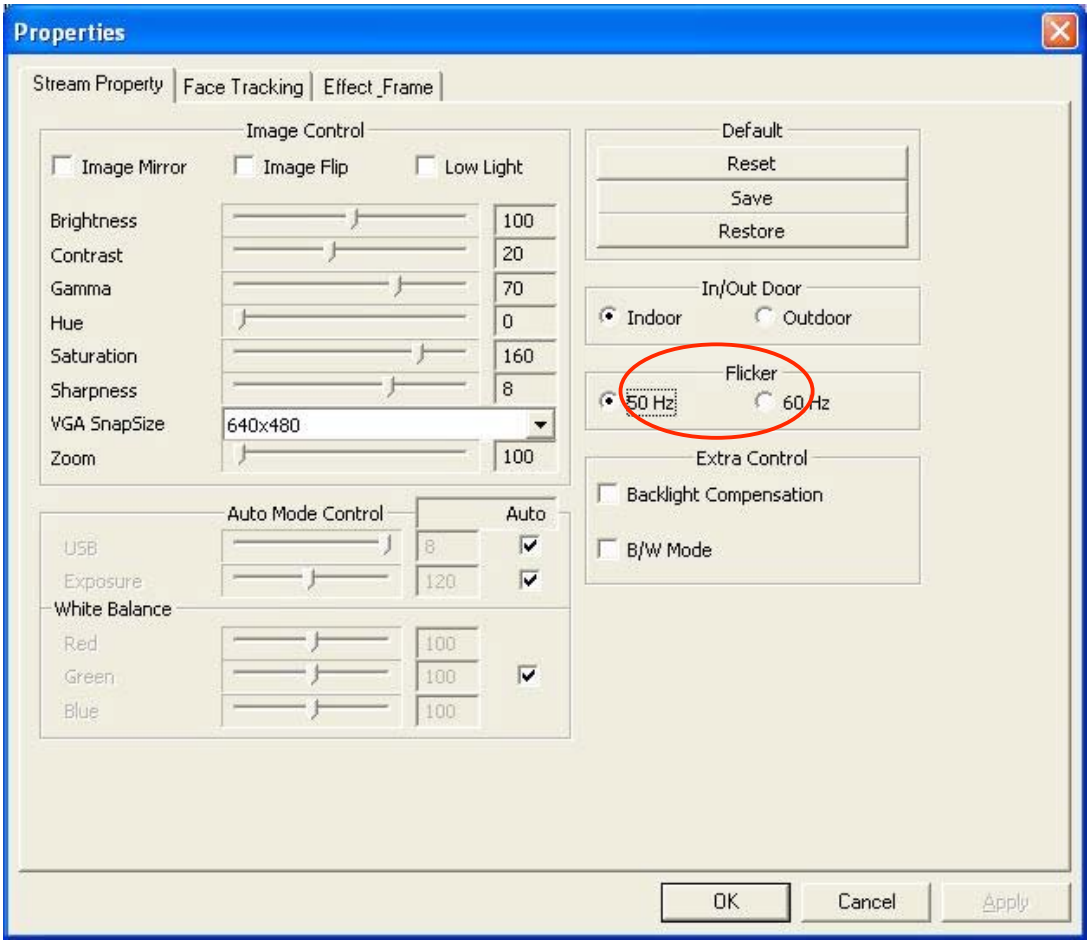

2. Getting Started With MediaImpression

Start MediaImpression

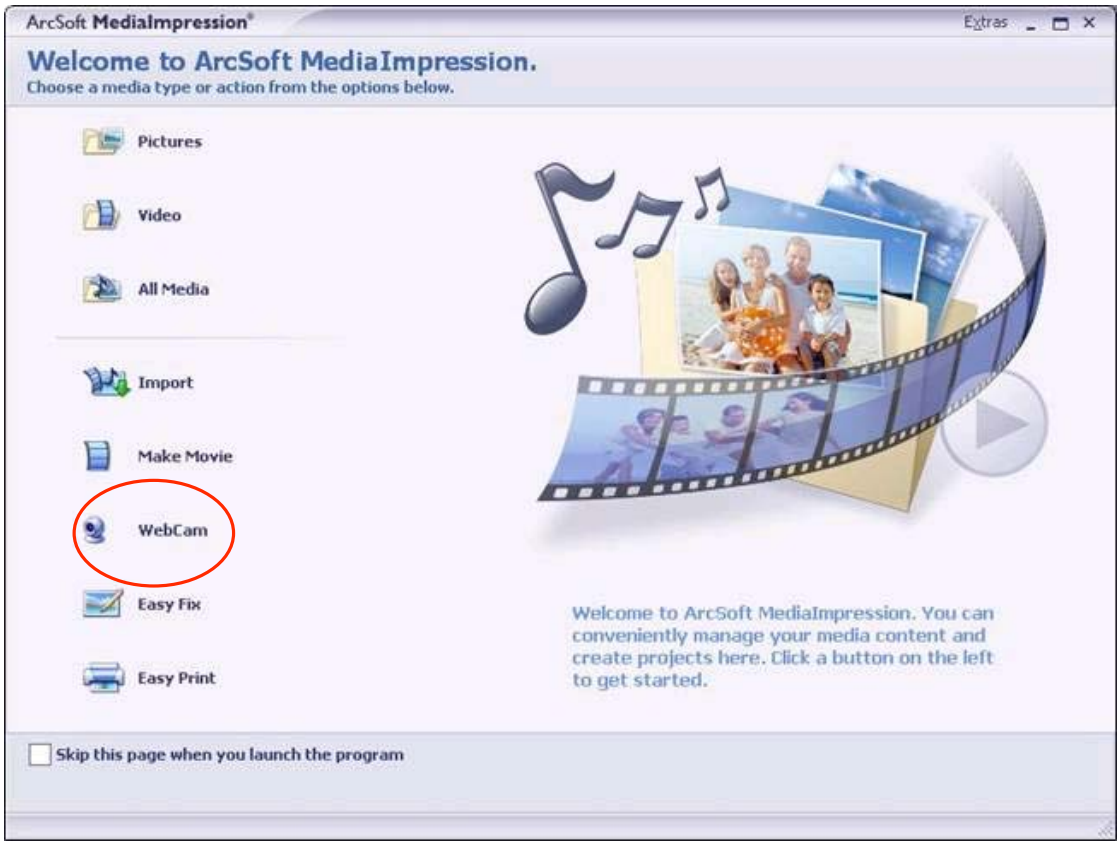
ArcSoft MediaImpression
Extras
Welcome to ArcSoft MediaImpression.
Choose a media type or action from the options below.
Pictures
Video
All Media
Import
Make Movie
WebCam
Easy Fix
Easy Print
Welcome to ArcSoft MediaImpression. You can conveniently manage your media content and create projects here. Click a button on the left to get started.
Skip this page when you launch the program

Select “WebCam”

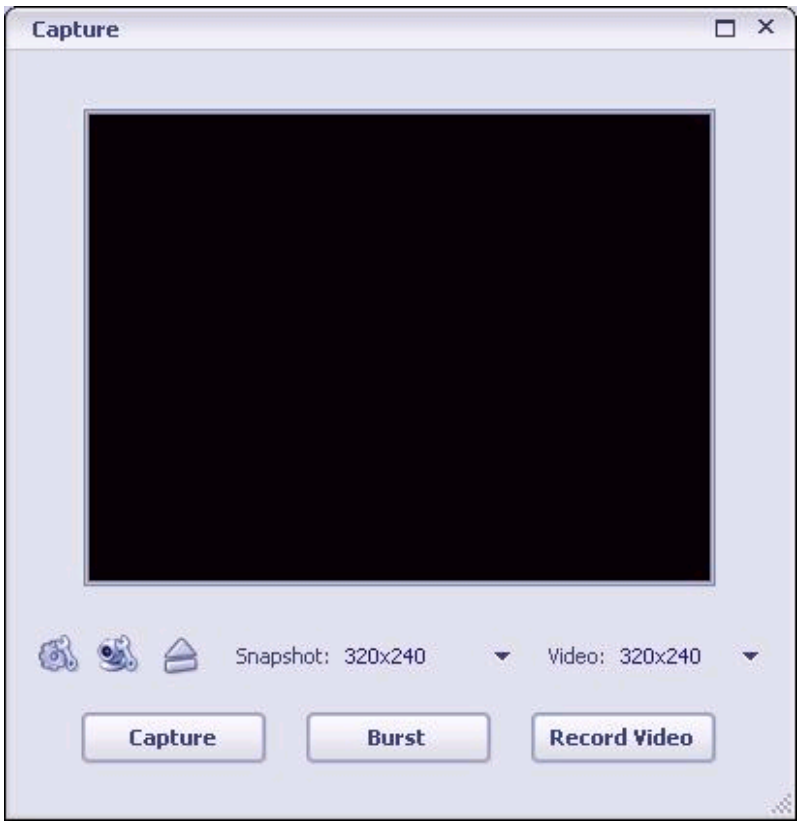

This module makes it easy for you to capture still images and video directly from your webcam. Before capturing, you may want to adjust the capture settings, webcam settings, and snapshot/video resolution according to your requirements.

Capture a still image by clicking the "Capture" button. Capture a group of images in burst mode by clicking the "Burst" button. Capture a video clip by clicking "Record Video" and then "Stop Recording."

Settings

Allows you to adjust your capture settings, such as video device, burst number, audio device and audio input, etc

WebCam Settings

Allows you to adjust your webcam related preferences, such as brightness, contrast, hue and saturation, etc

Connect

Connect your webcam. (This icon is displayed when your webcam is not connected.)

Disconnect

Disconnect your camera. (This icon is displayed when your webcam is connected.)

2.1 Photo

Click the “Capture” button to capture a photo and use “Photo Editing Tools” to edit the photo.

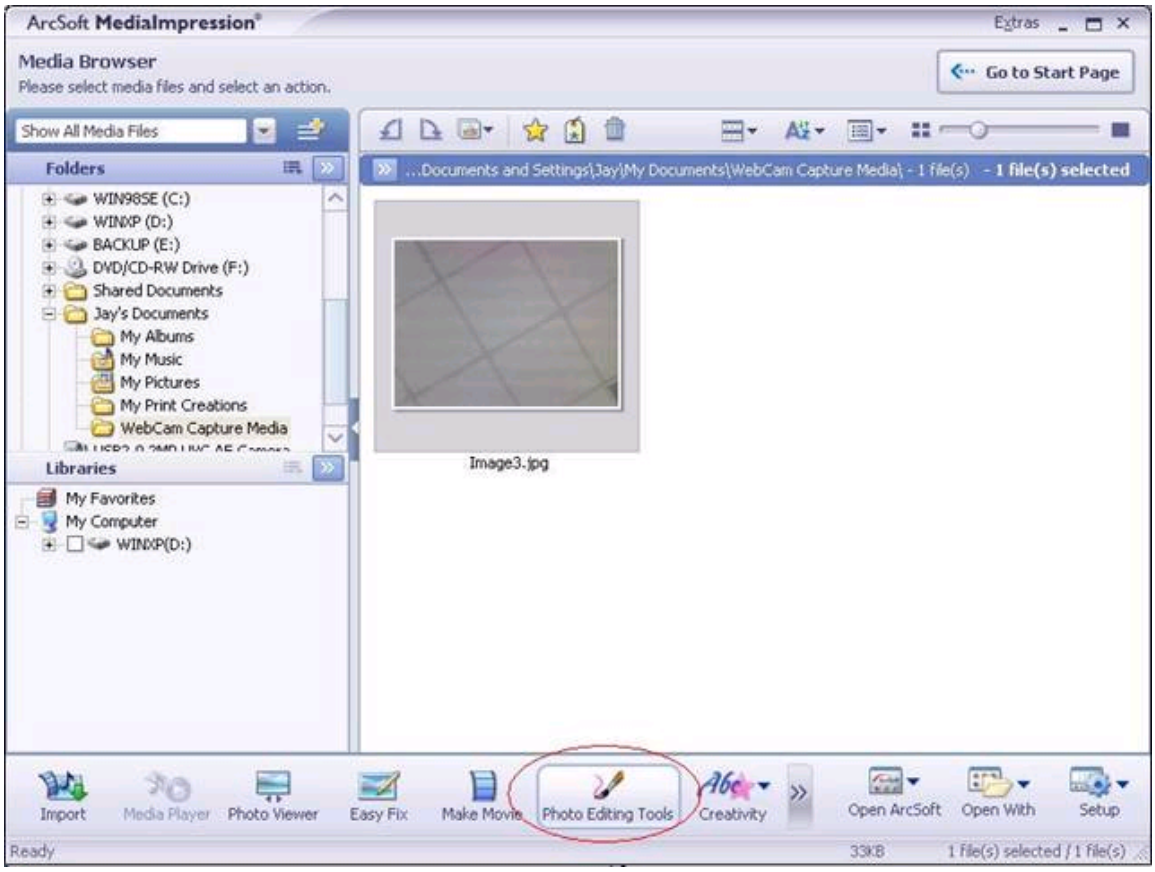

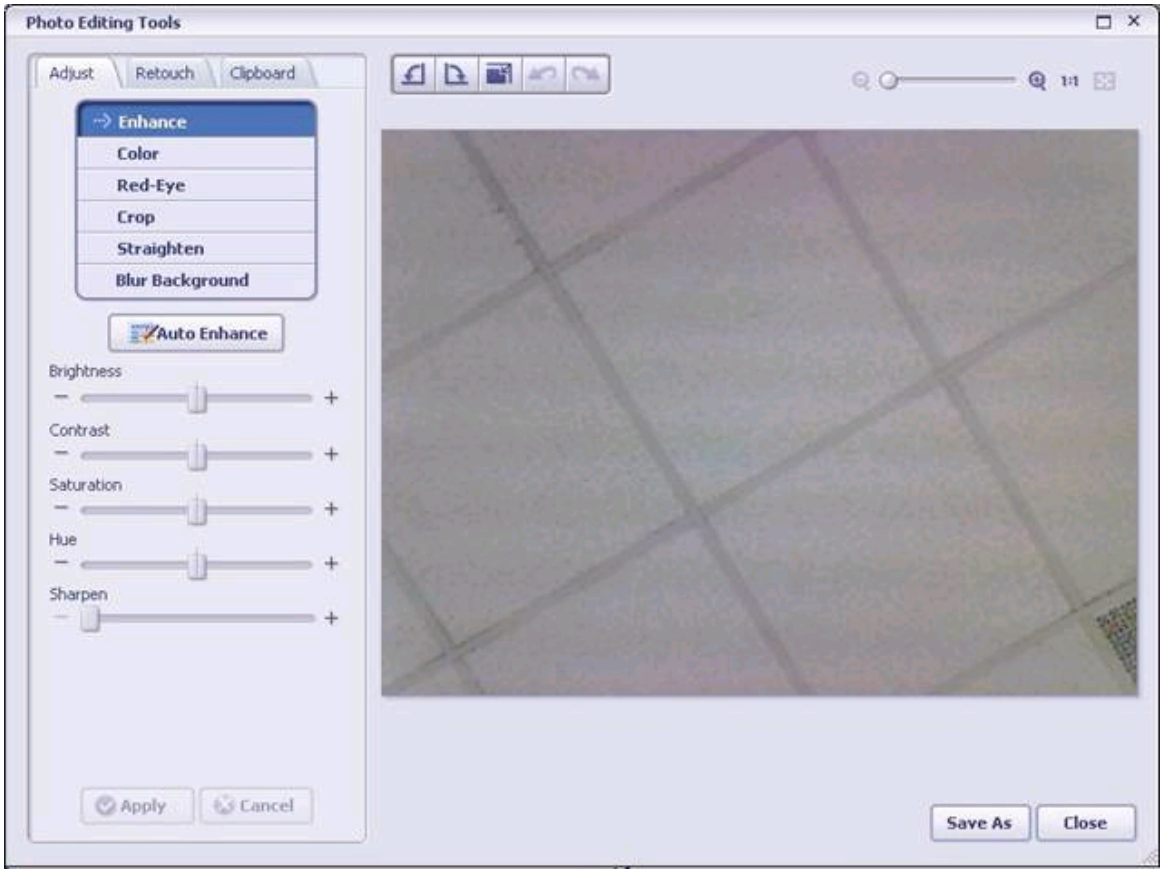

2.2 Video

2.2.1 Click the “Record Video” button to start recording and then click the “Stop Recording” to stop it.

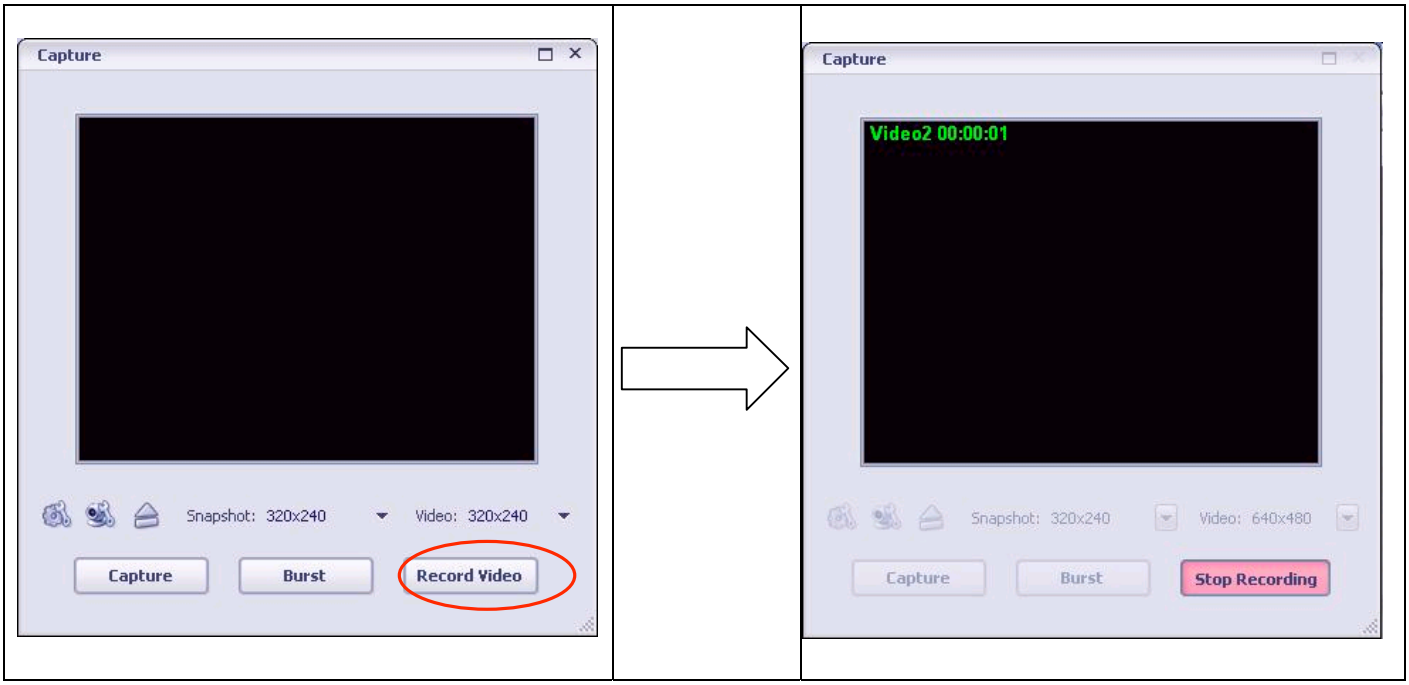

2.2.2 Select the recorded video and click “Make Movie” to produce professional-looking movie featuring your own photo and video files.

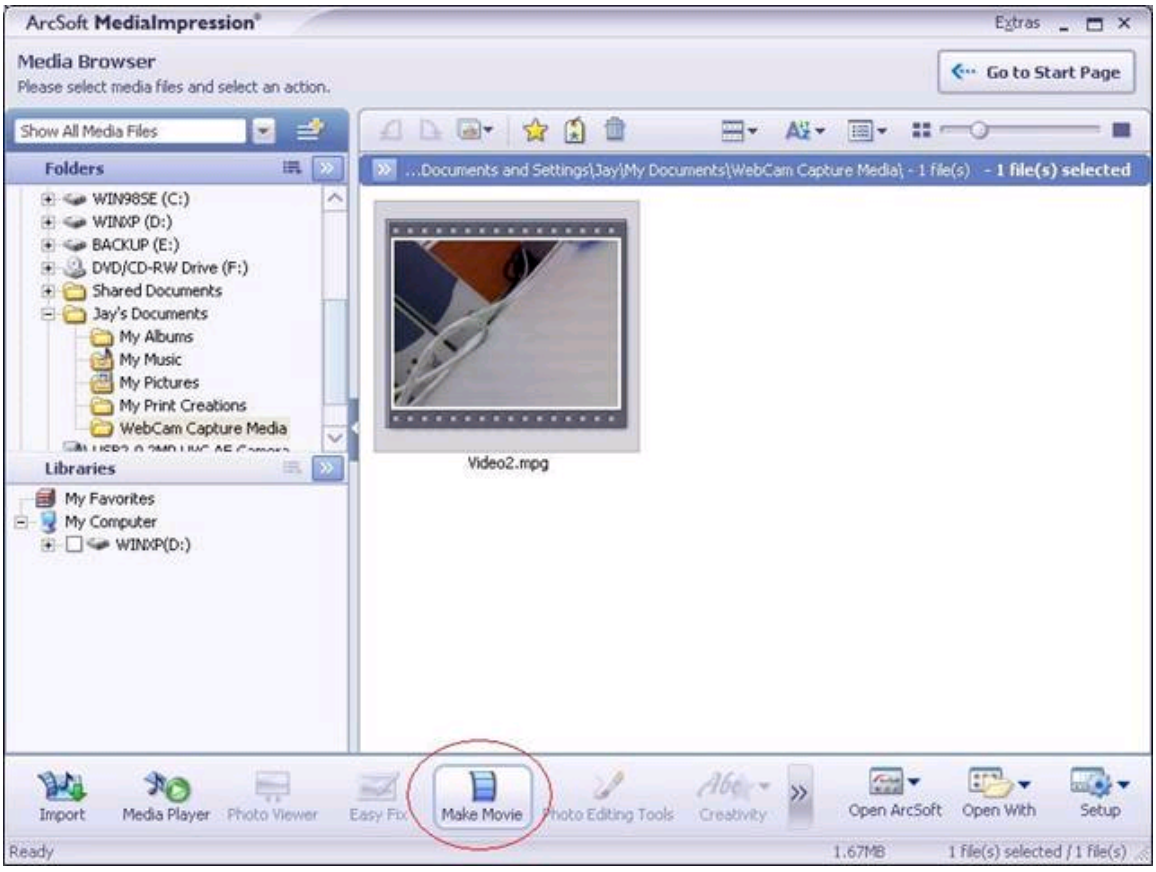

2.2.3 Click “Preview” to view the movie with the built-in player. Click “Save As” to save it. Click “Burn to Disc” to create a VCD or DVD featuring your movie.

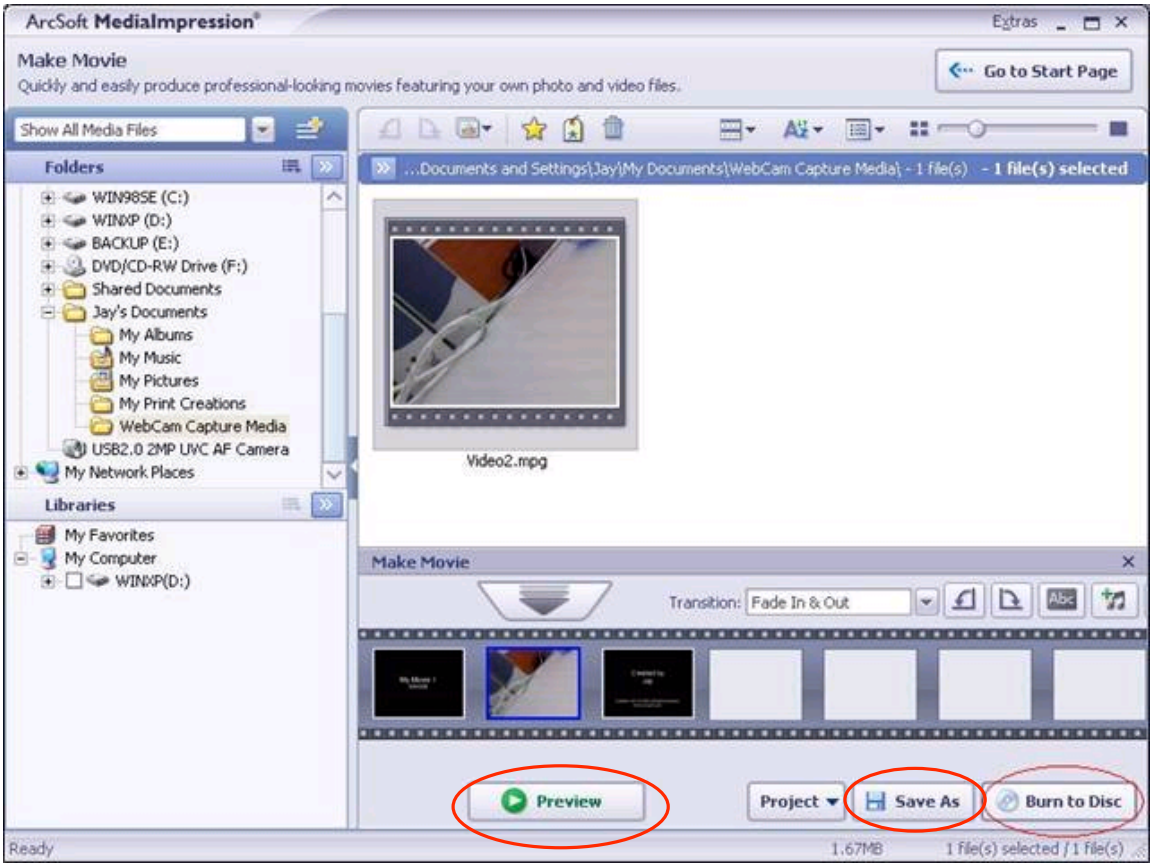

2.2.4 Select “VCD” or “DVD” and click “Start” to burn your movie to a Disc.

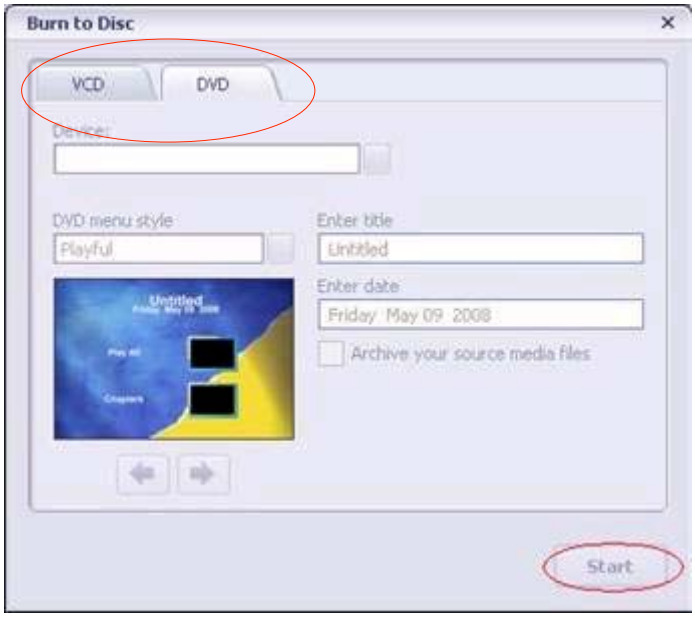

3 Getting Started with MSN® Messenger

3.1 Plug the PC camera into your PC first.

3.2 Click the "***Messenger***" to go to the main screen

3.3 Click the **Webcam** icon during a conversation.

–or–

Click the **Actions** menu on the main window, click **Start a Webcam Conversation**, select the name of the person you want to send video to, and then click **OK**.

For a 2-way webcam conversation, both participants must have a Web camera and each person must invite the other.

3.4 To stop sending your video image during a conversation, click the arrow under your video window, and then click **Pause Webcam** or **Stop Webcam**. You can continue to receive the other person's image, but your image will freeze in your contact's conversation window.

4 Minimum System Requirements

- Windows ® 7 or XP
- Pentium III 800MHz or higher processor
- Available USB port
- CD-ROM Drive
- 128 MB RAM, 256 MB recommended
- Hard drive with 1GB free space
- 16-bit Color Display

5 Two Year Limited Warranty

Jasco Products Company warrants this product to be free from manufacturing defects for a period of two years from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to:

Jasco Products Company

10 E. Memorial Road

Oklahoma City, OK 73114

6 FCC Statement

Notice: Federal Communications Commission (FCC) requirements, Part 15
This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes of modifications not expressly approved by the grantee of this device could void the users authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

is a trademark of the General Electric Company
and is used under license to Jasco Products Company LLC,
10 E. Memorial Road, Oklahoma City, OK73114.